


Dimension - 产品尺寸




The name and content of toxic and harmful substances or elements in the product
产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电路板组件*	×	○	○	○	○	○
壳体组件	○	○	○	○	○	○
机芯组件	×	○	○	○	○	○
显示组件	×	○	○	○	○	○
附件	×	○	○	○	○	○
○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006《电子信息产品中有毒有害物质的限量要求标准》规定的限量要求以下。 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006《电子信息产品中有毒有害物质的限量要求标准》规定的限量要求; 但是上表中打"×"的部件, 其含量超出是因为目前业界还没有成熟的可替代的技术。 *: 电路板组件包括印刷电路板及其构成的零部件, 如电阻、电容、集成电路、连接器等。						

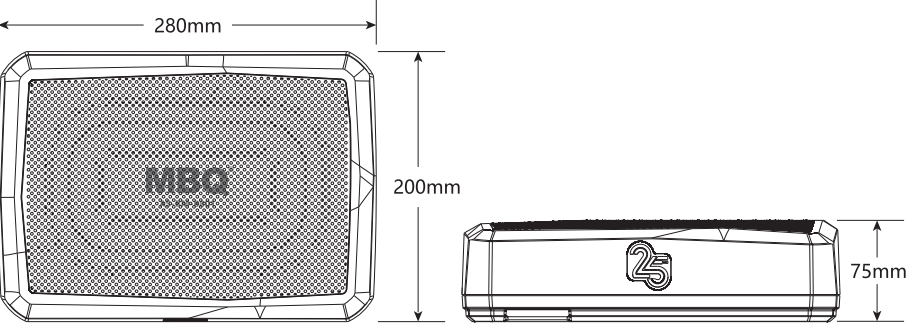

6" x 8" ULTRA-COMPACT ACTIVE SUBWOOFER
6寸x8寸有源超薄低音炮
AS-BM-6801

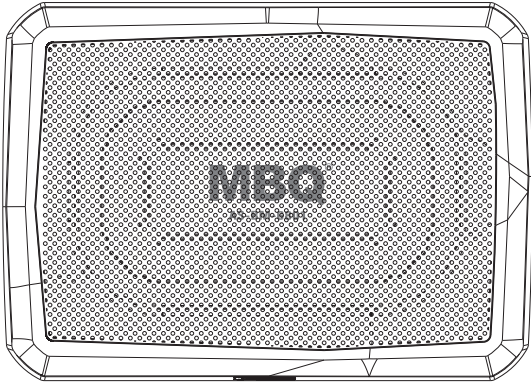

Instruction Manual
使用说明书

Product Introduction – 产品简介

Thank you for purchasing the MBQ underseat active subwoofer.
This is the upgrade subwoofer for your car audio system where you need to add bass to. The product has been thoroughly tested to ensure its performance consistency and reliability.

感谢您购买 MBQ 超薄有源低音炮。这款低音炮专为您需要提升低音的原车音响系统设计。该产品已经过全面测试，以确保其性能一致性和可靠性。

Product Features – 产品特点


- Compact Design for Underseat Installation
- Rigid Cast Aluminum Sealed Enclosure
- Optimized Subwoofer Unit with Aluminum Cone
- Built-in Class AB 160W Amplifier
- 超薄尺寸适配座椅下安装
- 高刚性压铸铝密闭箱体
- 优化的超低音单元，带铝合金鼓纸
- 内置AB类160W功放

Specifications – 产品参数


- | | |
|---|--------------------------|
| • Subwoofer Speaker Size: 6"x 8" | • 低音扬声器尺寸: 6"x 8" |
| • RMS Output Power: 80W | • 额定输出功率: 80W |
| • Max. Output Power: 160W | • 最大输出功率: 160W |
| • Voice Coil Diameter: 38.55mm | • 音圈尺寸: 38.55mm |
| • Built-in Amplifier Type: Class AB | • 内置功放类型: AB类 |
| • Frequency Response: 40Hz-150Hz | • 频率响应: 40Hz-150Hz |
| • Impedance: 4Ω | • 阻抗: 4Ω |
| • Signal-to-noise Ratio: >91dB | • 信噪比: >91dB |
| • Working Voltage: 14.4V(10V-16V) | • 工作电压: 14.4V(10V-16V) |
| • Phase Switch: 0°/180° | • 相位开关: 0°/180° |
| • Low Pass Filter: 50Hz-100Hz | • 低通滤波器: 50Hz-100Hz |
| • Bass Boost: 0 ~ +12dB | • 低音增益: 0 ~ +12dB |
| • Auto Turn ON/OFF: Hi-level Input Only | • 自动开机: 仅高电平输入 |
| • Cone Material: Aluminum | • 鼓纸材质: 铝合金 |
| • Magnet Motor: Ferrite | • 磁钢类型: 铁氧体 |
| • Enclosure Material: Cast Aluminum | • 外壳材质: 压铸铝 |
| • Enclosure Type: Sealed | • 外壳类型: 密闭型 |
| • Dimensions: 280 x 200 x 75mm | • 产品尺寸: 280 x 200 x 75mm |
| • Net Weight: 3.7kg | • 净重: 3.7kg |

Wiring Diagram – 接线指示图

- High Level Input Wiring - 高电平输入
- To speaker terminals of head unit
- 连接主机高电平输出端

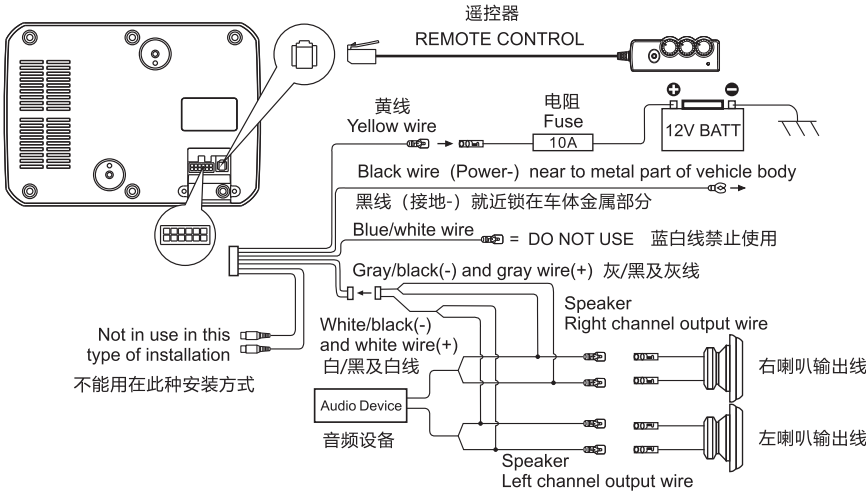

- Low Level Input Wiring - 低电平输入
- To audio outputs of head unit or signal processor
- 连接主机或信号处理器的RCA输出端

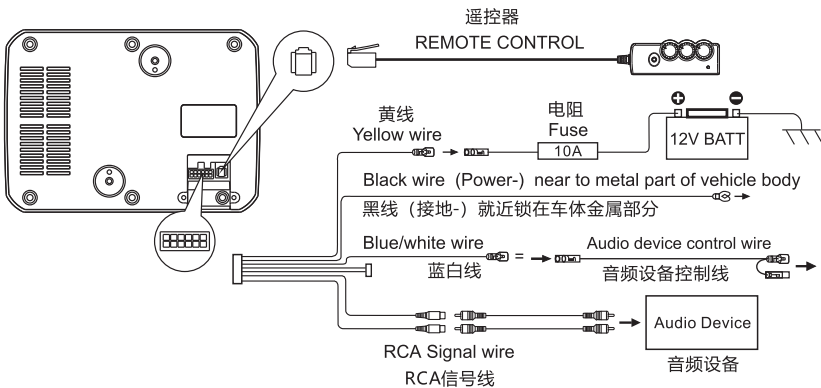

NOTE: Do not connect BOTH the high level and low level inputs from your receiver to your amplifier at the same time.
注意：请勿同时将主机的高电平和低电平输入连接到低音炮。